





KIT elite 2 Fili - 2 Wires



Cod. 3185N/1

Collegamento base kit - Default connection for kit - Connexions basique pour kit - Conexión básica para kit - Ligação básica para kit 3185N/1



L'impianto deve essere collegato secondo lo schema - The equipment must be installed according to the diagram - L'installation doit être installée en suivant le schéma
Für die richtige Installation befolgen Sie bitte die Hinweise aus dem Prinzipschema - La instalación debe ser realizada conforme al esquema
Efetuar a instalação segundo o esquema de ligação - Τα υλικά πρέπει να εγκατασταθούν σύμφωνα με το διάγραμμα. يجب تركيب الأجهزة حسب المخطط

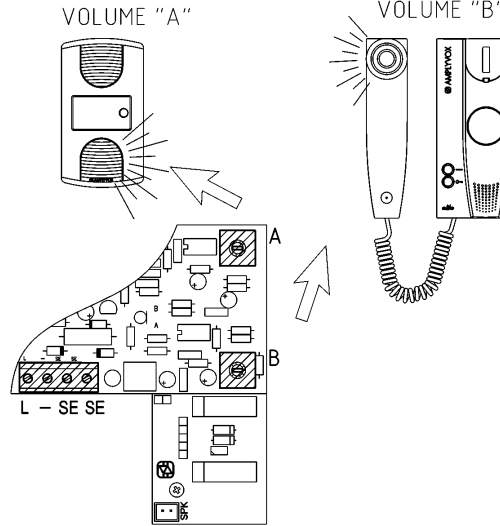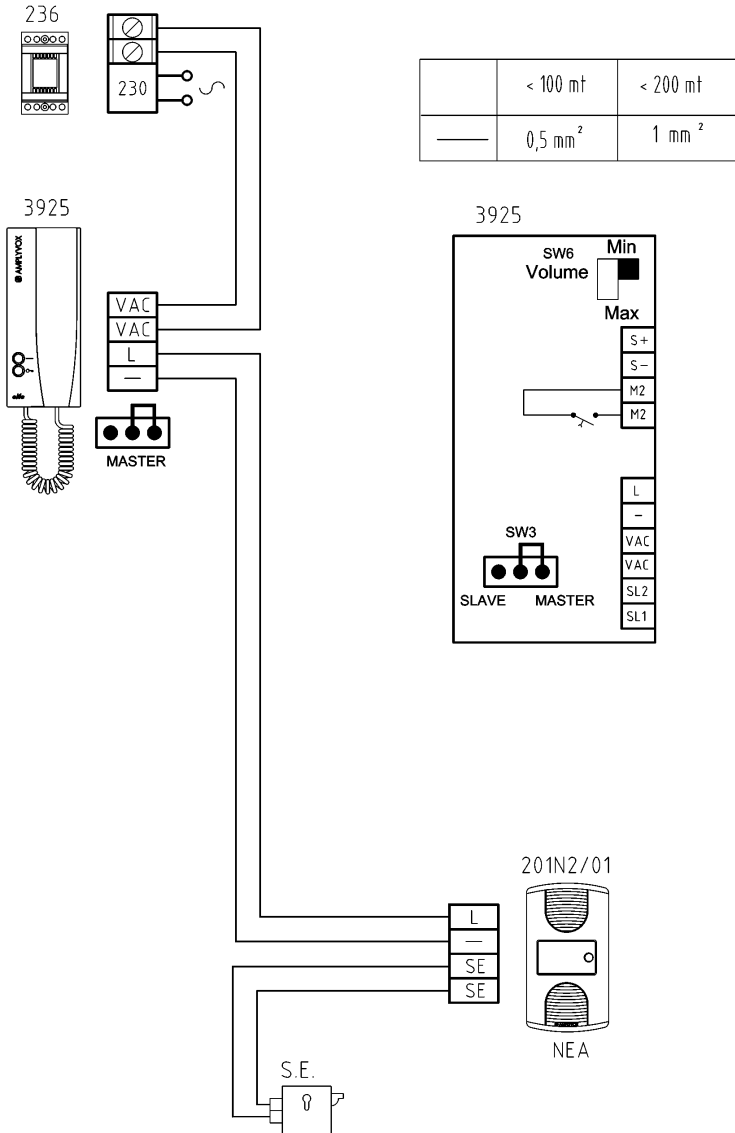

S.E.: Serratura elettrica - Electric lock - Serrure électrique - Cerradura eléctrica - Trinco eléctrico
12Vca - 18VA

OPTIONALS - OPCIONAIS

Citofono in parallelo - Telephone in parallel - Combiné en parallèle
Teléfono en paralelo - Telefone em paralelo

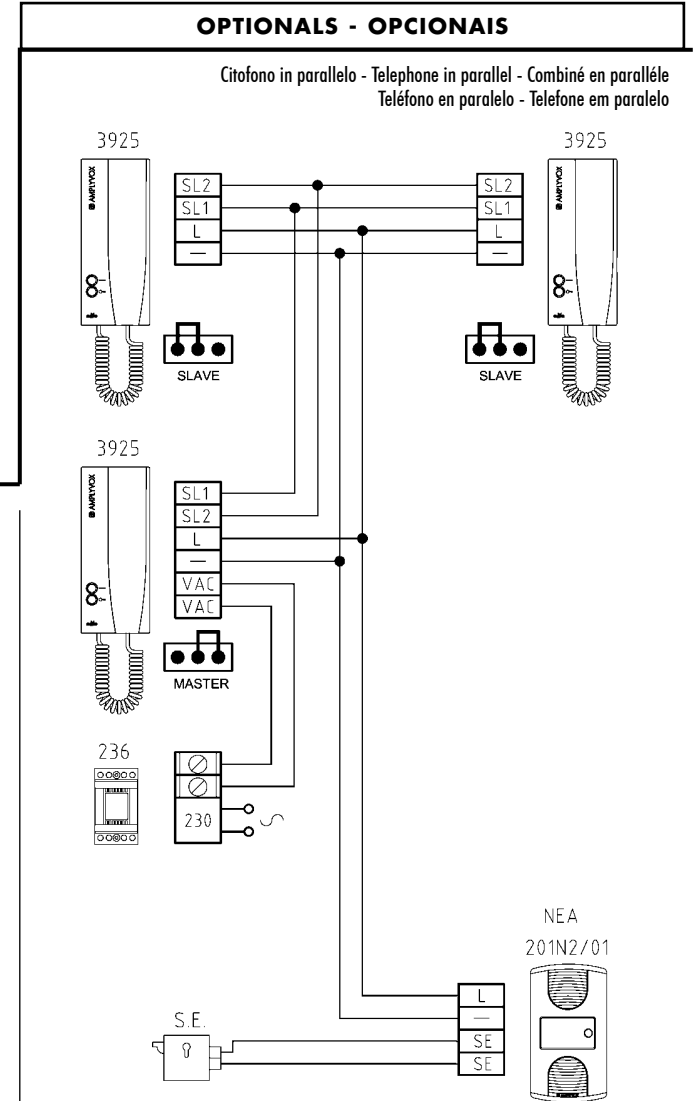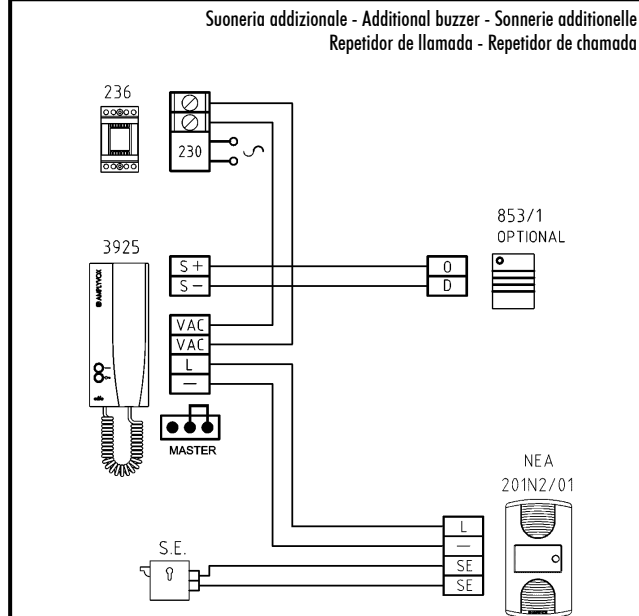

nea KIT elite 2 Fili - 2 Wires

Installazione della pulsantiera - Entrance panel installation
Installation de la plaque de rue - Instalación de la placa exterior
Instalação da placa botoneira

